

UXR™ -300ES SERIES

CERAMIC XENON LAMPS

The USHIO UXR™ Ceramic Xenon lamps are highly efficient, pre-aligned, parabolic reflectorized lamps for use in numerous scientific, medical and industrial illumination applications. The UXR features strong output reliability over life, highly stable 6100K color temperature, a compact and rugged ceramic to metal seal manufactured body and new window protection design. Manufactured at our ISO-certified plant, all UXR lamps are built to high quality standards for consistent and reliable performance.

FEATURES & BENEFITS:

- Rugged Compact Design
- Broad Continuous Spectral Output, High Color Rendering
- Superior Lumen Maintenance with Improved Ignition Reliability
- Demanding Quality Control and Manufacturing Aspects Produce Highly Consistent Lamp to Lamp Replacement Performance
- New Window Design Protects Against Scratching and Surface Contamination
- Special mounting pattern for universal heatsink positioning
- Operation in either Constant Current or Constant Power control mode
- Designed for improved efficacy next generation illumination systems



APPLICATIONS:

- Endoscopy
- Surgical Headlights
- Microscopy
- Borescopy
- Spectroscopy
- Visible/Infrared Searchlights
- Machine Vision
- Solar Simulation
- Projection

USHIO

UXR™ -300ES XENON SHORT ARC

UXR-300ES ITEM# 5003098

ELECTRICAL CHARACTERISTICS

| | |
|----------------------|-------|
| Watts (W) | 260 |
| Voltage (V) | 13 |
| Constant Current (A) | 20 |
| Current Range (A) | 18~21 |

SPECIFICATIONS

| | |
|----------------------------------|------------|
| Arc Gap (mm) | 1.0 |
| Spectral Type | Ozone Free |
| Window Diameter (mm) | ø25.4 |
| Reflector | Parabola |
| Warranty Life ¹ (h) | 500 |
| Useful Lifetime ² (h) | 1000 |

INITIAL OUTPUT

| | |
|-----------------------------------|------|
| Radiant Output (W) | 43 |
| Visible Output (lm) | 3250 |
| Visible Output (5mm Aperture)(lm) | 1400 |
| Color Temperature (K) | 6100 |

OPERATING CONDITION (Lamp)


| | |
|--------------------------|------------|
| Burn Position | Horizontal |
| Ceramic Body Temperature | Max. 150° |
| Base Temperature | Max. 200° |
| Forced Cooling | Necessary |

OPERATING CONDITION (Power Supply)

| | |
|----------------------|-------------------------------------|
| Power Supply | Constant Current & Power Control |
| Current Ripple (P-P) | Max 5% |
| Igniter Voltage | Min. AC23kV |
| Supply Voltage | Min. 140V |


¹ Rated warranty life total visible output is more than 60% of initial value.

² Useful lifetime total visible output is more than 50% of initial value.

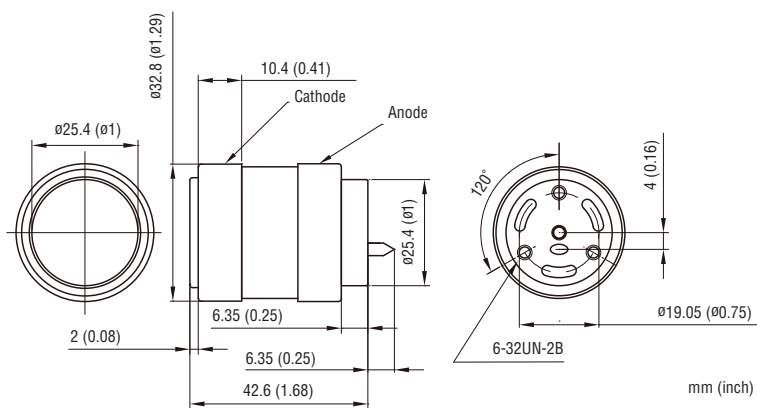


Visible Output (5mm Aperture) Degradation

Reference value for operating at rated lamp current.

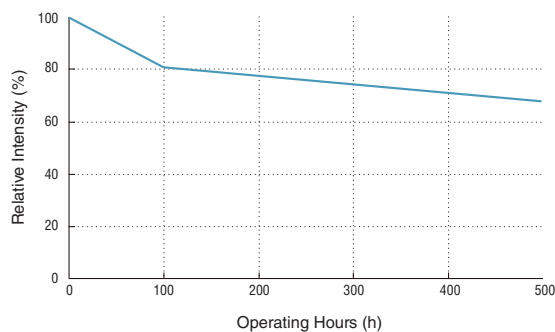


Spectral Distribution

Reference value when lamp is lit at rated lamp current.

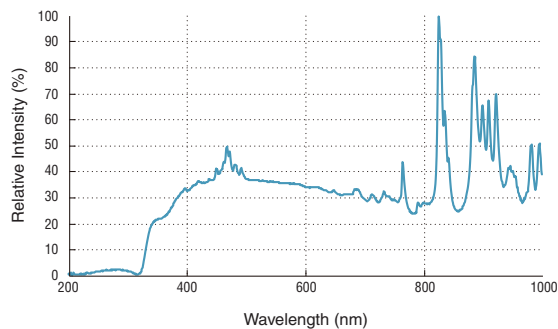


Ordinary Lamps

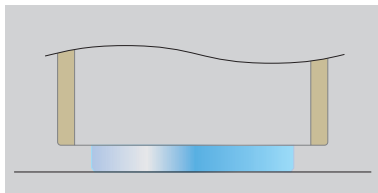

This drawing illustrates window contact on a surface which can cause window scratches and contamination.

UXR Series

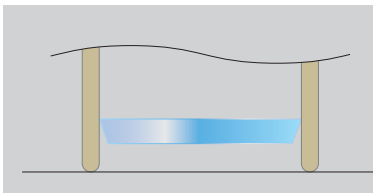






USHIO's UXR unique lamp design protects the front window from surface contact to help prevent scratching and contamination.



Safety Instructions



WARNING

-  High internal pressure exists in the lamp. Do not apply any excessive shock, stress or scratch the lamp while handling. Damage to the lamp may result in catastrophic failure.
-  Lamp should not be operated in a vertical position and with the window in an up position. Such orientation may result in high thermal stress and window failure.
-  Turn off the power before inserting, removing or cleaning the lamp to prevent electrical shock.
-  High voltage is required for ignition. Do not touch the lamp or heat sinks during operation, especially at the start of ignition.
-  Do not look directly at the operating lamp. Intense infrared and ultraviolet radiation generated by the lamp can cause skin burns and severe eye damage.



CAUTION

- High temperature in the lamp is achieved during operation. Do not touch the lamp during operation and for at least 10 minutes after turning off.
- Do not operate the lamp near flammable gas or chemicals.
- Attach heat sinks on both bases and apply forced air cooling. Apply a sufficient amount of heat conductive grease on both bases to obtain proper thermal management conditions.
- Lamp must be fixed at the anode base only, leaving the cathode base free so as to reduce mechanical and thermal stress which could cause catastrophic failure. Read and follow all equipment instructions.
- The filling tip on the anode base of a used lamp should be removed in order to reduce the internal pressure of the lamp before disposal.

IMPORTANT OPERATION NOTES

- Correct polarity and burning position are critical for lamp operation and maintenance.
- Lamp must be operated less than rated current.
- The glass window of the lamp should be free from dust and not touched by bare fingers or hand. In order to remove grease stains or dust, use a lint free alcohol wipe.
- Replace the lamp at end of life, when blackening occurs or when lamp flicker becomes severe.
- Remove the vinyl tube on the filling tip before installation.



NOTICE

Equipment shown in this catalog and any products using the equipment or technologies relating to the equipment fall under the category of security control relating to freight or technologies under the provisions of the Foreign Exchange and Foreign Trade Control Law. Permission needs to be obtained.

